Assembly instructions


LUNA upholstered bed (code FU-POS-101)

IMPORTANT – READ BEFORE ASSEMBLY AND KEEP

- ! Two adults are needed for the assembly. The headboard and side rails are heavy.
- ! The gas struts are under pressure. Do not take them apart, drill them or throw them into a fire.
- ! Without a mattress the lift-up base rises sharply. Hold it by hand when opening it until the mattress lies on it.
- ! Keep bags and small parts away from children – choking hazard.

In the box

A	quilted headboard, 1 pc
B	side rail, 2 pcs
C	footboard, 1 pc
D	storage floor, 2 parts
E	lift-up slatted base with frame, 1 pc
F	gas strut, 2 pcs
G	solid oak leg, 6 pcs
H	fittings bag (M8 bolts, washers, 5 mm hex key)

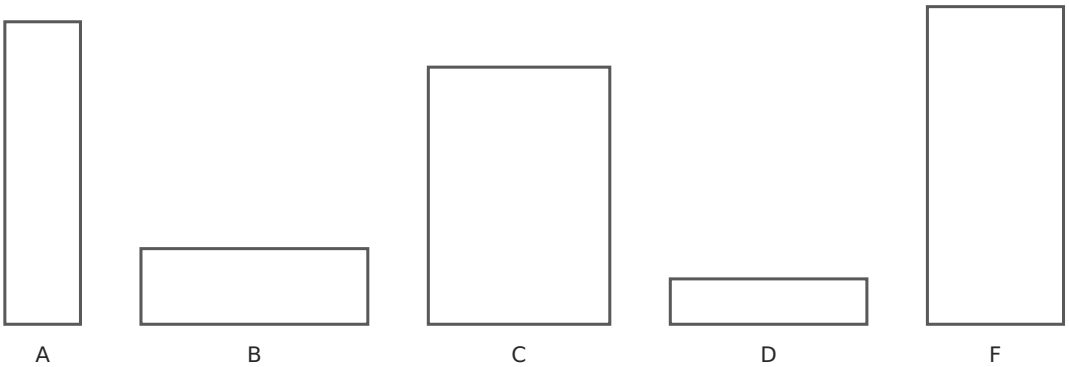

Assembly

1. Unpack the parts onto a soft surface so the fabric stays clean.
2. Screw the legs G into the side rails B and the footboard C.

3. Bolt the side rails B to the headboard A and the footboard C with the M8 bolts from bag H. Do not tighten fully yet.
4. Lay the storage floor D on the rails’ battens.
5. Level the bed and tighten every bolt.
6. Fit the base E into the fittings at the foot end and screw on the struts F: cylinder to the bed frame, rod to the base.
7. Lay the mattress on and lift and lower the base a few times.

Use and care

- Maximum load 2 × 120 kg, evenly spread. The storage space takes 40 kg.
- For 140, 160 or 180 × 200 cm mattresses, 18–25 cm high. The mattress and bedding in the photos are not included.
- Tighten all bolts again after two weeks of use.
- Vacuum the fabric with a soft brush; clean stains with a damp cloth and mild soap.

Maker

Nordic Home (sample maker). A sample document: it shows how a shop can add a downloadable file to a product. The maker is a sample one and the figures are for show only.